IrrigationCaddy

ETHERNET IRRIGATION CONTROLLER

Irrigation Caddy Model: ICEthS1

User Manual and Installation Instructions

IRRIGATION CADDY MODEL: ICETHS1

User Manual and Installation Instructions

KGControls LLC
2606 Orsobello Place
Cedar Park, TX 78613
Phone 800 284 1072
Email: support@IrrigationCaddy.com

Table of Contents

Installation 1
- Introduction 1
- Installation Steps 1
- Mounting on the Wall 2
  - Steps: 3
- Connecting Valve Wires 3
  - Steps: 3

Usage 5
- Setting the Clock 5
  - Steps: 5
- Setting a Program's Schedule 7
  - Turn the program ON or OFF 7
  - Selecting which days to run 8
  - Start Time 10
  - Setting zone run times 11
- Using the "Run Now" Program 11
- Status Area 12
  - Turning the system OFF 12
  - Stopping Individual Zones 12
- Calendar 13

Settings 15
- Firmware Version 16
- Clocks 16
- Network Settings 16
- Zone Names 17
- Authentication 18
- Other 19
- Resetting to Factory Defaults 19

Index 20

Chapter 1

Installation

Introduction

The Irrigation Caddy (IC) device is an Ethernet irrigation system. The system allows the user to control and schedule an irrigation system from any computer with a web browser.

No special software or clients are required, just a Web Browser on a computer or internet enabled device.

The IC can be used in new installations or as a replacement for an existing sprinkler control system.
The IC supports up to 10 different irrigation zones.
If your system uses a master valve, one of the outputs will be used as the master valve control, thus allowing only a maximum of 9 zones.
Out of the box the IC is configured with output #10 set as the master valve output.

Installation Steps

WARNING
🕮 info

NOTE: The Irrigation Caddy is an indoor device. Make sure the device is placed indoors in a dry protected area. Exposure to rain and extreme weather conditions will damage the device.

Mounting on the Wall

Figure 1 Views all sides

A. Screw mounting hole

B. Power connector (24VAC)

C. Valve connector.

D. Rain sensor connector.

E. Ethernet connector

F. Reset button hole.

G. Power light indicator.

Steps:

1. Find an appropriate location for the IC, and hold the enclosure in place.
2. Using a pen make marks through the screw mounting holes (A) on the plastic ears protruding from the enclosure.
3. **NOTE:** If installing on Drywall make sure you use screw anchors
4. Put the device aside, and drill a hole on each one of the marks you made.
5. Put the Irrigation Caddy back in place and insert the screws through the mounting holes.

Connecting Valve Wires

Steps:

1. If this is a replacement installation, first remove the old Sprinkler Control System, and attach the IC to the wall. Make sure the valve cables can reach the IC.
2. Identify the common cable and connect it to the "**com**" output.
3. Connect valves **1** through **9**, to the corresponding outputs on the IC
4. If your installation includes a master valve, connect the master valve to output **#10** ("**10 | MV**").
5. Connect a network cable from a network switch, or your Cable / DSL Router to the IC (E).
6. Connect the power cable to the IC using the "**AC1**" "**AC2**" (B) outputs using the connector provided.
7. Plug the wall transformer to a power outlet.
8. The IC should now be installed, and ready to use.
9. Go to a computer connected to the same network as the IC, and type **http://irrigationcaddy**

Chapter 2

Usage

Going to the **http://irrigationcaddy** web address will present you with a Web Interface to the IC.
The IC is capable of scheduling irrigation times using three different programs, which can be scheduled independently.
The IC also provides the user with a "**Run Now**" program, which allows the user to execute a one time schedule, immediately after programming.

Setting the Clock

It is important that you set the IC's clock time to the current time.

Steps:

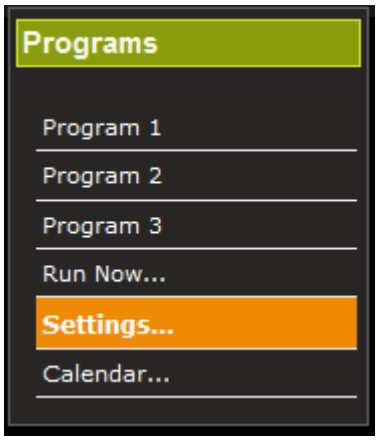

1. Click on "Settings".
2. Click on "Clocks".

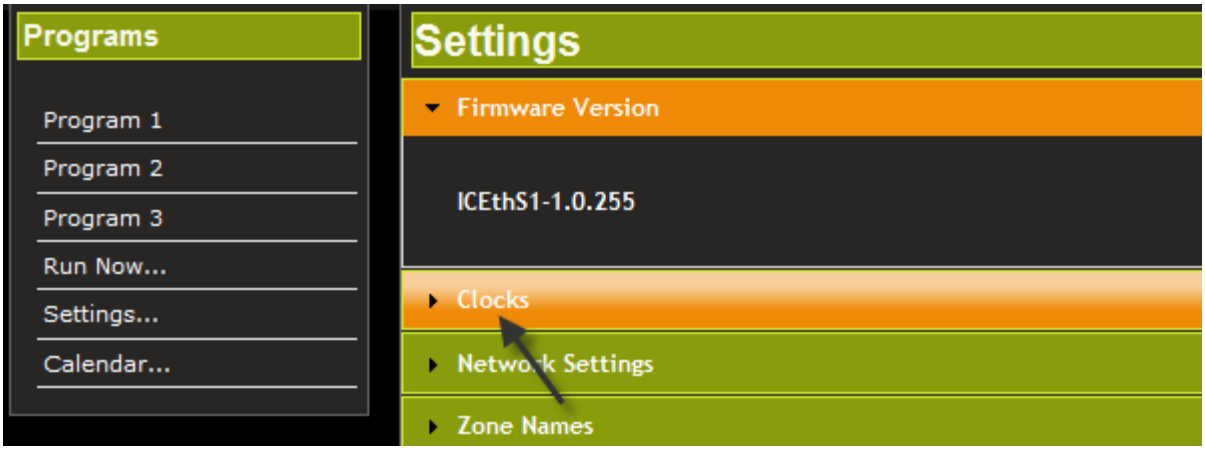

Figure 2 Clock settings

3. Set the time:

    a. You can use the "**Synch Clocks**" button to synch the IC's clock with your computer's clock.

    b. Or you can manually set it by clicking on the field next to the "**Set Datetime**" button.

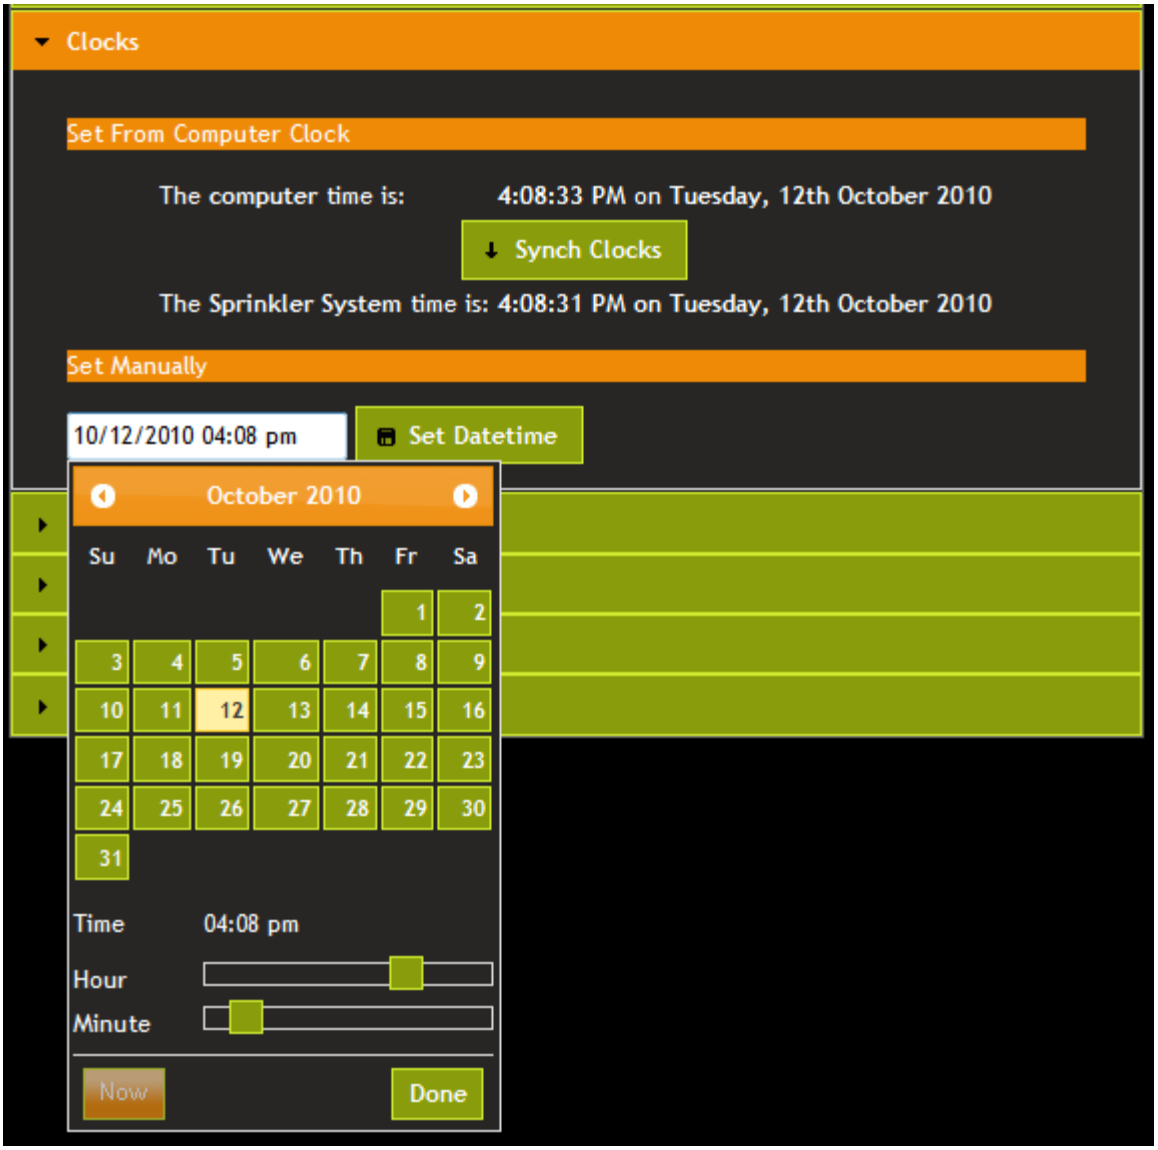
Clocks
Set From Computer Clock
The computer time is: 4:08:33 PM on Tuesday, 12th October 2010
Synch Clocks
The Sprinkler System time is: 4:08:31 PM on Tuesday, 12th October 2010
Set Manually
10/12/2010 04:08 pm
Set Datetime
October 2010
Su Mo Tu We Th Fr Sa
1 2
3 4 5 6 7 8 9
10 11 12 13 14 15 16
17 18 19 20 21 22 23
24 25 26 27 28 29 30
31
Time 04:08 pm
Hour
Minute
Now
Done

Figure 3 Modifying the system time

4. Once the IC's clock has been set, this step does not have to be repeated.

Setting a Program's Schedule

Turn the program ON or OFF

Turn the program **ON** by checking the "**ON/OFF**" check box at the top. If you leave the box unchecked, the settings will be saved as expected, but the schedule will not run.

Figure 4 Turning programs on and off

Selecting which days to run

First select the program you would like to configure.

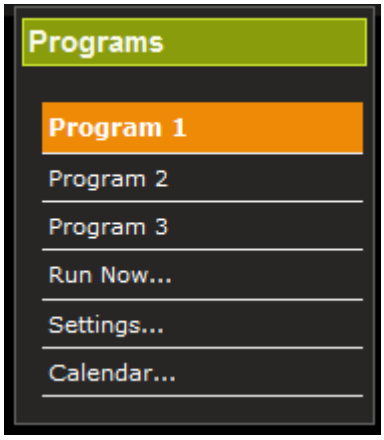

Figure 5 Program Selection

The IC supports several different programming schemes

INDIVIDUAL DAYS

With this scheme you set what days of the week you would like to run your sprinklers. The program will then start only on the days you selected.

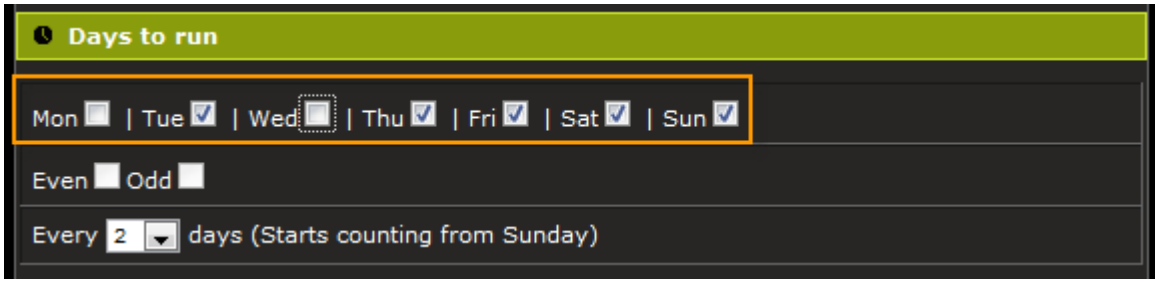

Figure 6 Individual day selection

EVEN / ODD DAYS

With this scheme you select whether you would like the system to run on only even numbered days (2, 4, 6 etc) or odd numbered days (1, 3, 5 etc). Then you would select the individual week days you would like the system to run on. This way you can tell the system to run on even days, but not on weekends for example.

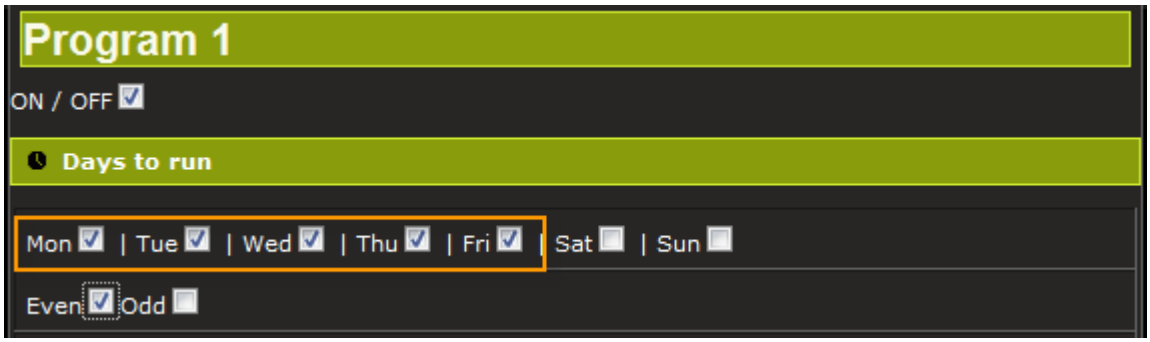

Figure 7 Even / Odd Day Selection 1

If you would like to run even or odd days regardless of what day of the week it is then you would select every day of the week.

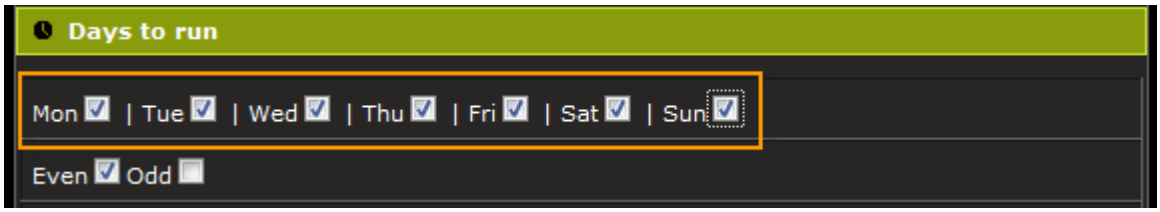

Figure 8 Even / Odd day selection 2

EVERY N DAYS

With the Every N Days option you can tell the system to run exactly every a specified number of days (i.e. every 3 days). As with the Even / Odd option, you can combine this option with the individual days, and also restrict which days of the week the system should run on. For example you can tell the system to run every 2 days except for Mondays, and Wednesdays.

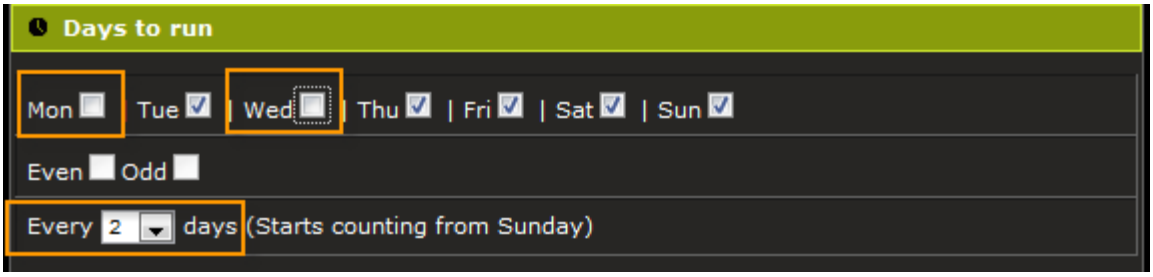

Figure 9 Every N Days interval and day selection

Every time the program is changed, and saved, the system will reset the time the program last run on, and start counting from the Sunday closest to 31 days prior to the current date. So if you make a change to a program that is set to run every 3 days, no matter what day it run last it will start counting from the Sunday closest to the date that falls 31 days prior to today.

NOTE

Info

The Even / Odd Days and Every N Days options cannot be combined. Once one is selected the other is disabled. If the Every N Days options has a number of days selected other than "-", the Even / Odd option will not be available. Set the Every N Days number of days to "-" before selecting the Even / Odd option.

Start Time

To select the program's start time click on the text field below the "Start Time" heading, and a time picker will display. Then select the start time using the sliders.

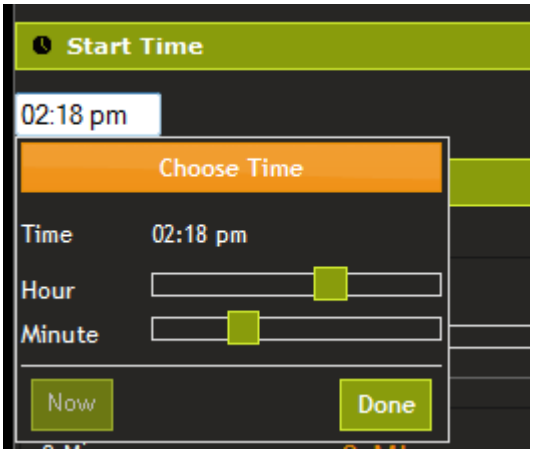

Figure 10 Program start time selection

Setting zone run times

To set the zone run times, under the "**Run Times**" heading, move the slider to the right to increase the amount of time a zone should run. The run time will display on top of the slider as well as to the right of the slider.

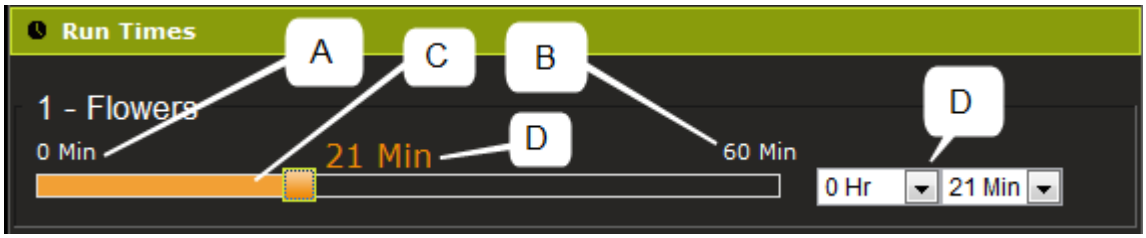

Figure 11 Zone run time

A. Minimum time boundary

B. Maximum time boundary. The zone cannot be set to run for more than the high time boundary. This limit can be changed from the settings page.

C. The slider.

D. The amount of time the zone will run.

Using the "Run Now" Program

The "Run Now" program allows you to run the system at the current moment. Just set the duration times on each one of the zones you are interested in running, and click on the "Run Now" button. This will start the system immediately.

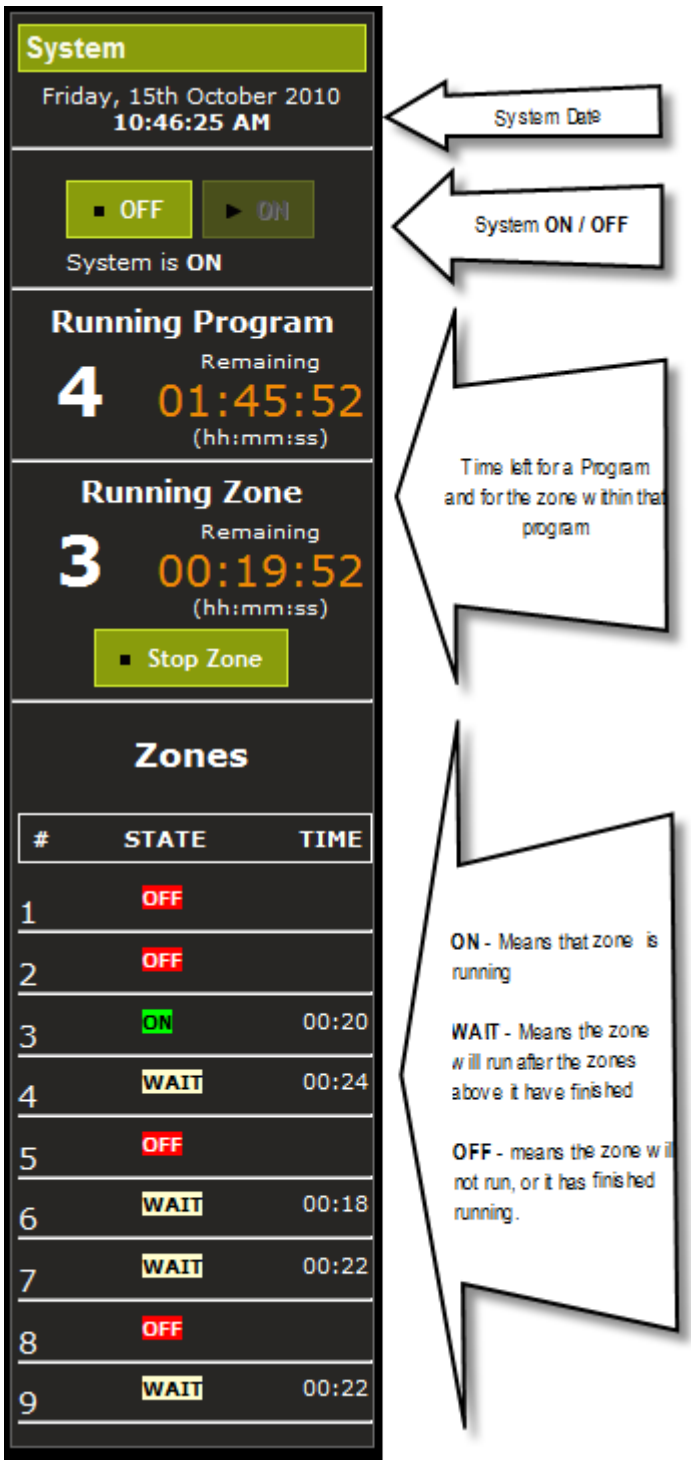

Figure 12 System status area

Status Area

The status area is divided in 4 sections.

The first section shows the system time.

The second section indicates whether the system is **ON** or **OFF**, and it allows the user to turn system **ON** or **OFF**.

The third section indicates the run time remaining for a program and for the zone currently running within that program. It also allows the user to stop the zone.

The fourth section is a global status area for the zones. **ON** will display for a zone currently running, **WAIT** is for a zone that will run in the future after the zones above it have finished running, and **OFF** indicates the zone has already run, or the zone will not run at all.

Turning the system OFF

During the winter months you will not probably want to run the system. In that case, you can turn the system **OFF** by clicking on the "**OFF**" button in the "**System**" section. When you want the programs to run again, you would simply click on the "**ON**" button. Note the system would still be powered on, but it will not turn on the sprinklers.

Stopping Individual Zones

While a program is running, you can stop individual zones by clicking on the "**Stop Zone**" button in the "**System**" section. If there is a zone waiting to run, that zone will then take over and start.

If for some reason you would like to stop the program from continuing to run, you could click on the "**Stop Zone**" button for each one of the zones scheduled to run until there are no more zones ready to run.

Calendar

You can see a visual representation of when then programs will run by clicking on the "Calendar" link.

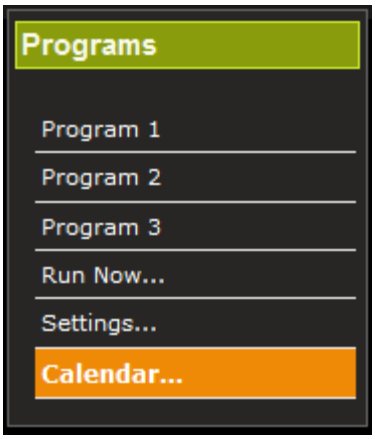

Figure 13 Calendar link

There are three possible calendar views, "**month**", "**week**", and "**day**". By default "**month**" will display but you can change the view by clicking on the appropriate button on the top right hand corner of the view.

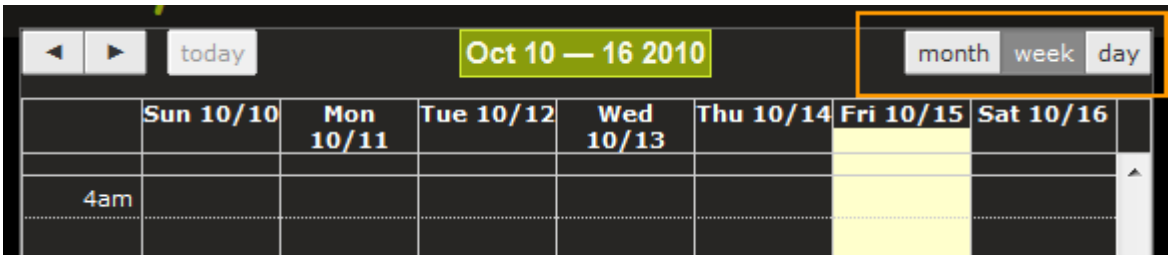

Figure 14 Selecting calendar view

The following is an example "week" view, where you can clearly see Program 1 will run on Monday starting at 6am, Program 2 will run on Wednesday starting at 10am, and Program 3 will start on Thursday at 8pm.

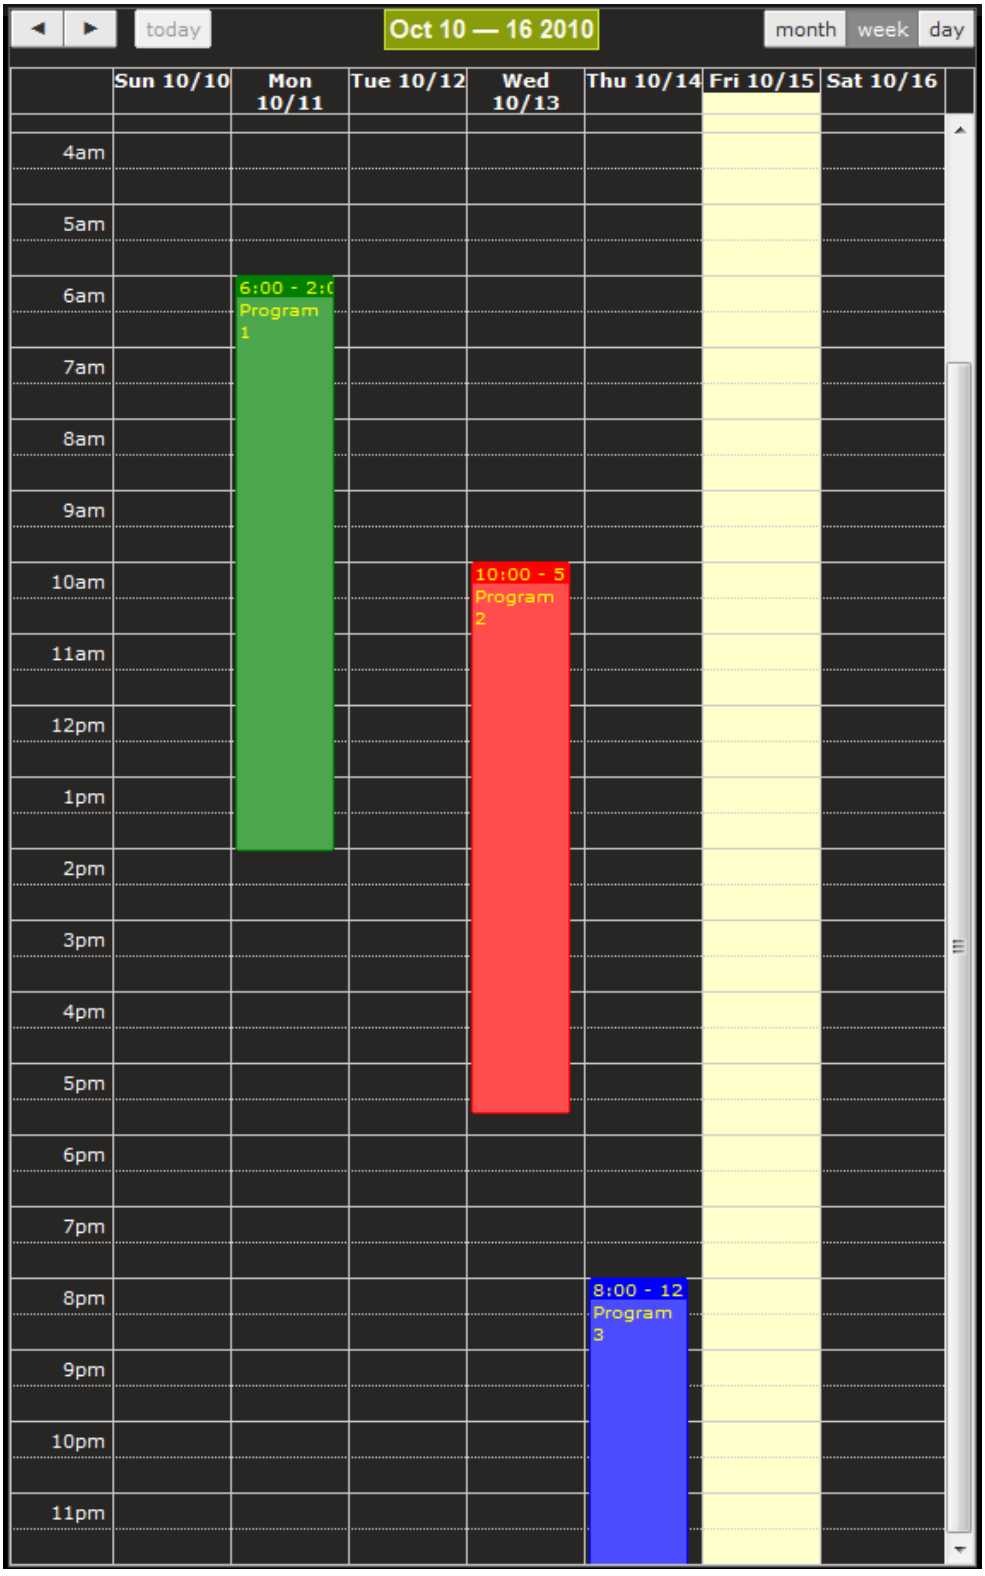

Figure 15 Calendar view

Chapter 3

Settings

The settings page can be accessed by clicking on the “Settings” link.

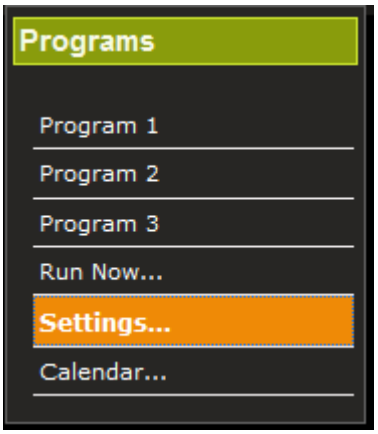

Figure 16 Settings Link

Once you access the settings page the system settings are subdivided into sections.

Figure 17 Settings sections

Firmware Version

This section displays the firmware version the system is currently configure with.

Figure 18 Firmware version

Clocks

It allows the user to set the system clock (see “Setting the Clock” under Usage)

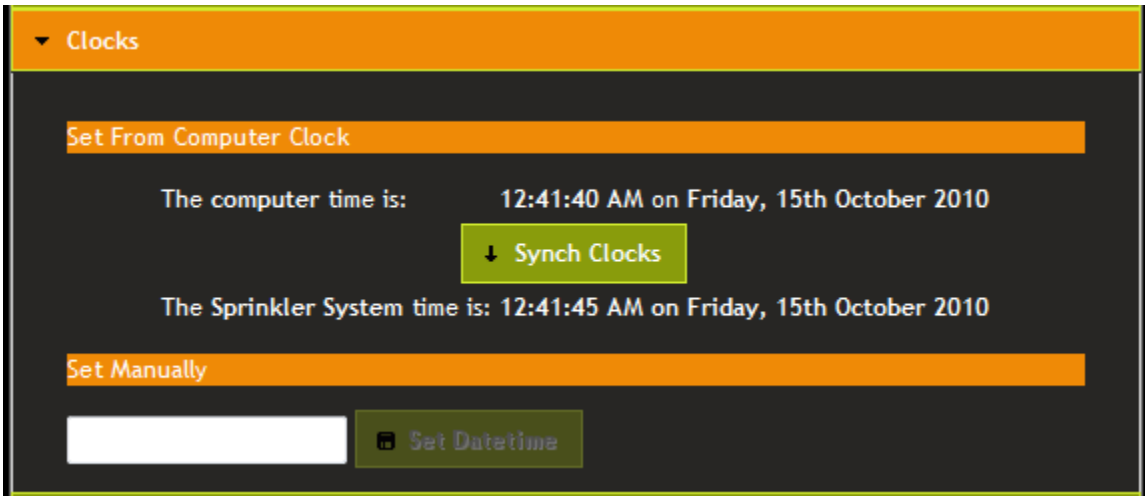
Clocks
Set From Computer Clock
The computer time is: 12:41:40 AM on Friday, 15th October 2010
Synch Clocks
The Sprinkler System time is: 12:41:45 AM on Friday, 15th October 2010
Set Manually
Set Datetime

Figure 19 System Time

Network Settings

The section displays the current network system settings and also allows for setting the hostname, DHCP or Static IP address configuration, IP Address (if static was chosen), port number, default gateway, and network mask.

WARNING

Info

Unless you are proficient with network terms, and understand how devices communicate in an Ethernet network, it is recommended that you don’t change the default settings.

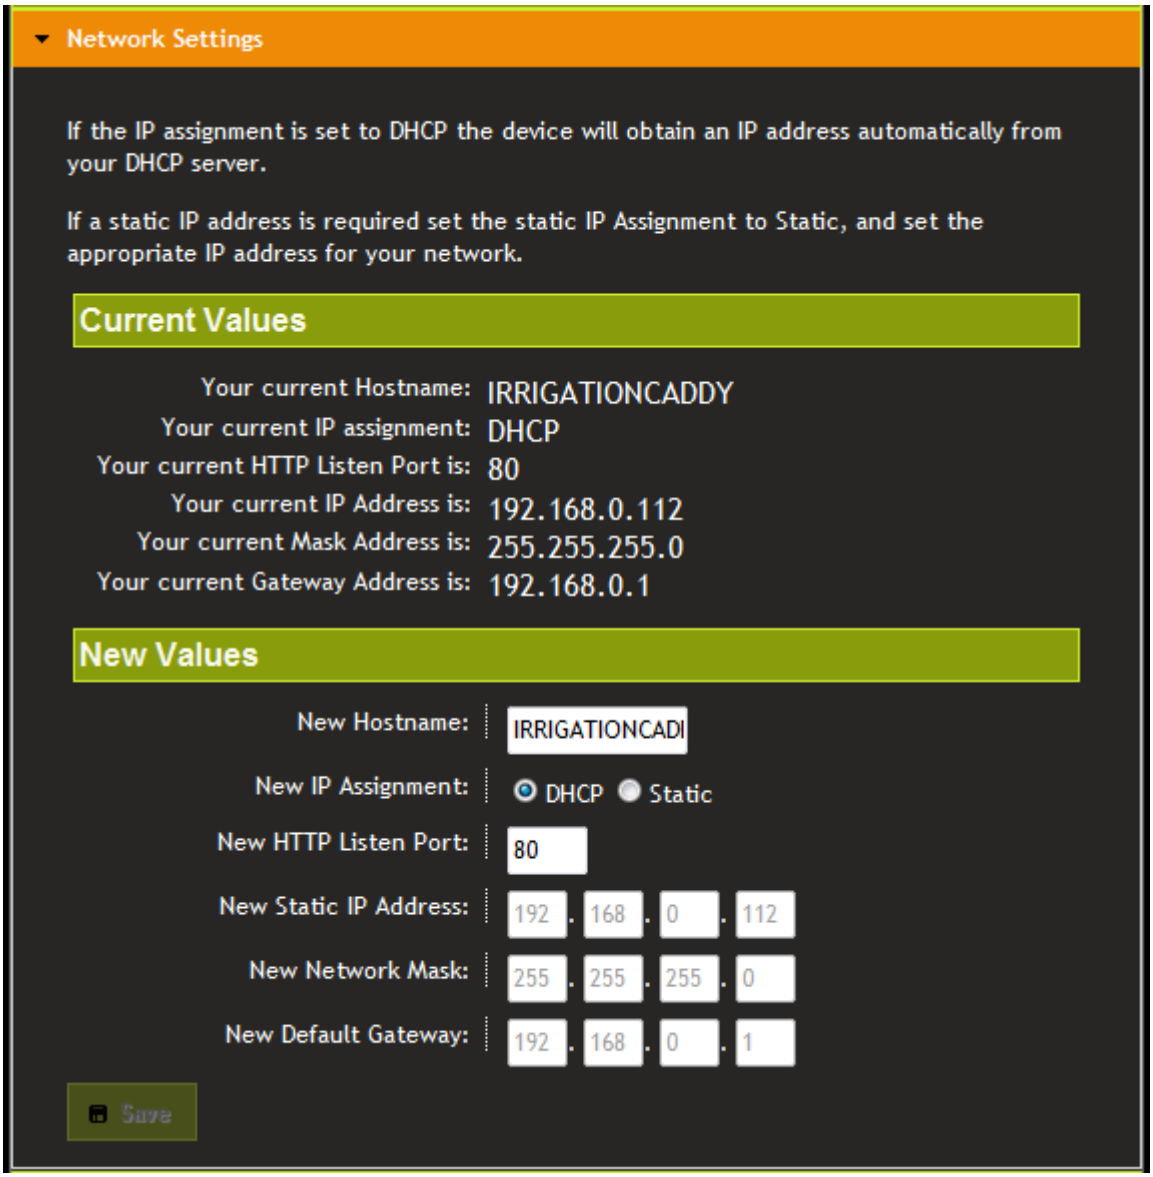
Network Settings
If the IP assignment is set to DHCP the device will obtain an IP address automatically from your DHCP server.
If a static IP address is required set the static IP Assignment to Static, and set the appropriate IP address for your network.
Current Values
Your current Hostname: IRRIGATIONCADDY
Your current IP assignment: DHCP
Your current HTTP Listen Port is: 80
Your current IP Address is: 192.168.0.112
Your current Mask Address is: 255.255.255.0
Your current Gateway Address is: 192.168.0.1
New Values
New Hostname: IRRIGATIONCADI
New IP Assignment: DHCP Static
New HTTP Listen Port: 80
New Static IP Address: 192 . 168 . 0 . 112
New Network Mask: 255 . 255 . 255 . 0
New Default Gateway: 192 . 168 . 0 . 1
Save

Figure 20 Network settings

Zone Names

This section allows for the setting of the zone names. By default zones are numbered and the names are empty. By giving a zone a descriptive name it is easier to remember which zone waters what area.

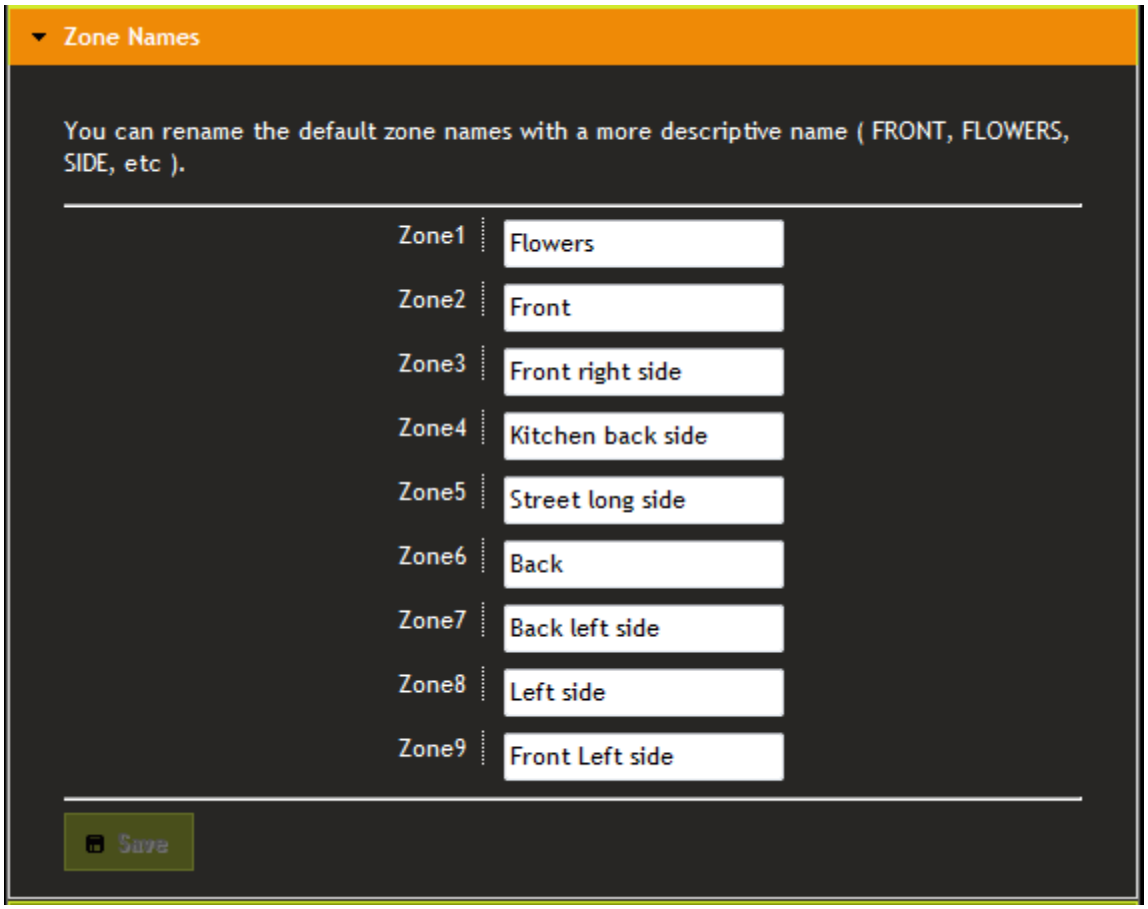

Figure 21 Zone names

Authentication

In here you can enable or disable authentication. By default authentication is disabled. By turning authentication ON, and setting a username and password, the next time you try to access the device you will be prompted for a username and password. If the credentials you enter don't match the credentials you specified here, you will not be allowed access to the IC's interface.
If you forget the username and password, the only way to access the IC is to reset it to its factory default settings by (See Resetting to Factory Defaults)

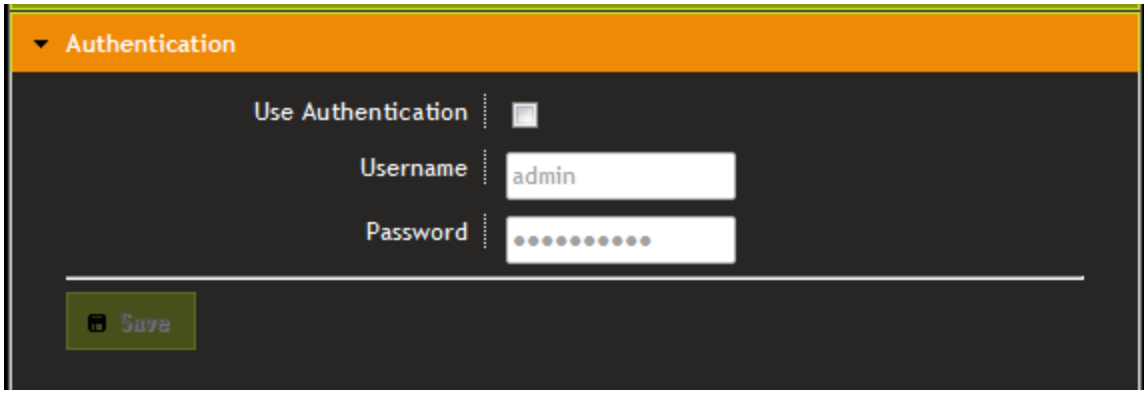

Figure 22 Authentication

Other

This section is reserved for other unrelated settings. Two settings are available, "**Use Sensor 1**", and "**Max Zone Run Time**".

"**Use Sensor 1**" is intended to be used with a rain sensor. When a rain sensor is plugged into the rain sensor connector, you can use this setting to tell the system whether it should pay attention to the sensor or not. If the "**Use Sensor 1**" setting is checked the system will check for a rain sensor, and if a sensor is present, it will water or stop watering according to the sensor state. If the sensor is wet, the system will not water.

The "**Max Zone Run Time**" setting is intended to globally limit the maximum amount of run time that a zone can be set at. The main purpose of the setting is to prevent programming mistakes and avoid unintended long periods of watering.

Figure 23 Other settings

Resetting to Factory Defaults

To reset the IC to its factory default settings, find a small pin hole next to the Ethernet connector on the side of the enclosure, and insert the end of a paper clip into it pushing in. Then while still pushing the paper clip in, turn the IC OFF by unplugging its power source, and then applying power again. Wait 10 seconds while still holding the clip down, and then let it go. The IC should now be reset.

Index

Authentication, 18
Calendar, 13
clock, 5, 6, 7
common. *See* Connecting Valve Wires
Connecting Valve Wires, 3
DHCP. *See* IP
Drywall. *See* Mounting on the Wall
Ethernet, 0, 1
even. *See* EVEN / ODD DAYS
Even / Odd Days, 9
Every N Days, 9
indoor, 1, *See* Installation Steps
Installation Steps, 1
IP
  DHCP, 16
  Network, 16
  Static, 16
master, 1, 3
Mounting on the Wall, 3
Network Settings, 16
odd. *See* EVEN / ODD DAYS
rain sensor, 19
reset, 19
Resetting to Factory Defaults, 19
Run Now, 5, 11
schedule, 1, 5, 7
Settings, 15
Static IP. *See* IP
Zone Names, 17